


Part Number: 27L2644

ThinkPad 390 Quick Reference and Service Information


Your Name:		
Company Name:		
Model Number:		
Serial Number:		
Company or Reseller Service:		
IBM Service Website:		
IBM Service Number:		

Location

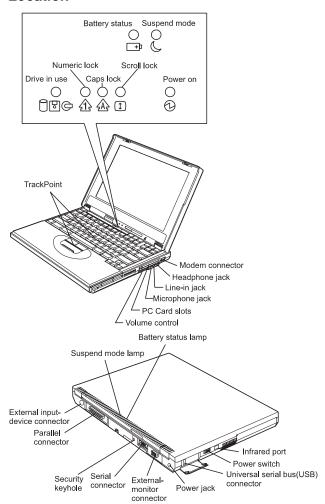

Function Keys

 You can change operational features instantly using the following Fn key and function keys combinations:



Fn +	Result
F2	The window for the battery power status appears or disappears. (The Fuel-Gauge program must first be activated.)
F3	The computer enters standby mode.
F4	The computer enters suspend mode.
F7	The display output location changes.
F11	During battery-power operation, the power mode changes.
F12	The computer enters hibernation mode.

Getting Service

Always read the Solving Computer Problems chapter of your User's Reference before calling

During the warranty period, you can get help and information from the International Warranty Service (IWS) in your country. Before you call, fill out the front of this card. Also have:

- · Exact wording of any error messages
- Hardware and software configuration informa-
- Description of the problem
- Information and serial numbers of any options installed on your system

International Warranty Service

This IBM product is eligible for IWS wherever your machine type is sold by IBM. Your computer must be registered to receive international service. To register, call one of the following IWS offices:

Southeast Asia, Australia, New 61-2-9354-4171

Zealand, and Hong Kong:

Canada, Latin America, and the U.S.: 1-800-497-7426 Europe, Middle East, and Africa: 44-1475-893638 Japan, Korea, China (except Hong 81-462-73-7598

Kong), and Taiwan:

Help through a ThinkPad Web Site

• The latest information about ThinkPad computers:




Technical support information:



ThinkPad Configuration Program

You can manipulate your hardware system settings with the ThinkPad Configuration program. To start the ThinkPad Configuration program, click on **Start**, move the cursor to **Programs**, **ThinkPad**, then **ThinkPad Configuration**.

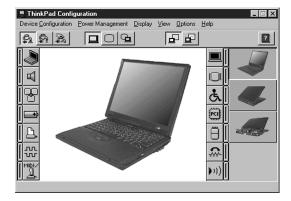

For more information, click on the Help button (



TrackPoint Setting

You can customize such TrackPoint function as Press-to Select, Sensitivity, and Scrolling. Click on Start, move the cursor to Settings, Control Panel, then double-click on the TrackPoint icon.

Battery Status

You can see the battery status by using the Fuel Gauge program. To start the Fuel Gauge program, click on **Start**, **Programs**,**ThinkPad**, then **Fuel-Gauge**.

For Further Information

You can find the following information in your ThinkPad user's manuals:

User's Reference	Online User's Guide	
Getting familiar with your computer Extending the fea-	 Using your com- puter outside your country 	
tures of your com- puter	 Using audio and modem features 	
Protecting your computer	 Protecting your computer 	
 Troubleshooting 	 Operating with a 	
Getting service	battery pack	
Features and spec-	 Using a PC Card 	
ifications	Resolving system	
Product warranties	resource conflicts	
and notices	 Troubleshooting 	
Glossary and index	 Installing software 	
	 Managing your system 	
	 Using PS2 com- mands 	
Note: To see the Online User's Guide, click on Start, move the cursor to Programs, ThinkPad, then ThinkPad Online User's Guide.		