IBM

Notes:


Part Number: 27L8796


ThinkPad 570

Quick Reference and Service Information

Your name:		
Company name:		
Model number:		
Serial number:		
Company or reseller service:		
IBM service Web site:		
IBM service number:		

Locations

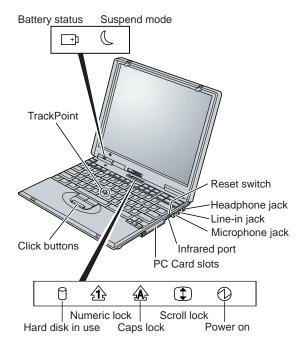

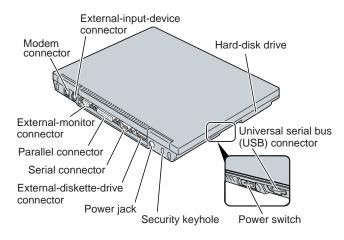

Attaching option

If you want to use the diskette drive, attach it externally.

You need to power off your computer; then attach the diskette drive.

Note: For details, see the *User's Reference*

Function keys

Fn +	Result
F2	Show or hide the window for the battery power status.
F3	Enter standby mode.
F4	Enter suspend mode.
F7	Change the display output location.
F8	Switch the screen size to the full screen mode.
F11	Change the power mode.
F12	Enter hibernation mode.
PgUp	Increase the volume.
PgDn	Decrease the volume.
Back Space	Turn off the sound. Note: To turn on the sound, press $\mathbf{Fn} + \mathbf{PgUp}$ or $\mathbf{Fn} + \mathbf{PgDn}$.

Getting service

Always read the "Solving computer problems" chapter of your *User's Reference* before calling IBM.

During the warranty period, you can get help and information from International Warranty Service (IWS) in your country. Before you call, fill out the front of this card. Also have:

- The exact wording of any error messages
- Hardware and software configuration information
- A description of the problem
- Information and serial numbers of any options installed on your system

International Warranty Service information

This IBM product is eligible for IWS wherever your machine type is sold by IBM. Your computer must be registered to receive international service. To register, call one of the following IWS offices:

Southeast Asia, Australia, New Zealand,

 and Hong Kong:
 61-2-9354-4171

 Canada, Latin America, and the U.S.:
 1-800-497-7426

 Europe, Middle East, and Africa:
 44-1475-893638

 Japan, Korea, China (except Hong Kong), and Taiwan:
 81-462-73-7598

Help through a ThinkPad Web site

- The latest information about ThinkPad computers:
 - http://www.pc.ibm.com/thinkpad
- Technical support information:
 - http://www.pc.ibm.com/support

ThinkPad Configuration program

You can customize your hardware system settings with the ThinkPad Configuration program. To start the ThinkPad Configuration program, click **Start**, move the cursor to **Settings**, and click **Control Panel**; then double-click the **ThinkPad Configuration** icon.



For more information, click the **Help** button



Battery status

You can monitor the battery status with the Fuel-Gauge program. To start the Fuel-Gauge program, click **Start** and move the cursor to **Programs** and **ThinkPad**; then click **Fuel-Gauge**.

If you are using the secondary battery, you can also see its status with the Fuel-Gauge program.

For further information

You can find the following information in your ThinkPad user's manuals.

User's Reference

- Basic information on your computer
- Using your computer and extending its features
- Protecting your computer
- Solving computer problems
- Features and specifications

Online User's Guide

- Using your computer outside your home country
- Using the features of your computer
- Protecting your computer
- Using your computer with a battery pack
- Using your computer with a PC Card
- Resolving system resource conflicts
- Frequently asked questions
- Installing software
- Using system management
- Using PS2 commands
- Using modem commands
- Handling tips
- Getting service

Note: To start the *Online User's Guide*, click Start and move the cursor to **Programs** and ThinkPad 570; then click *ThinkPad 570 User's Guide*.